




stickers by dVider™

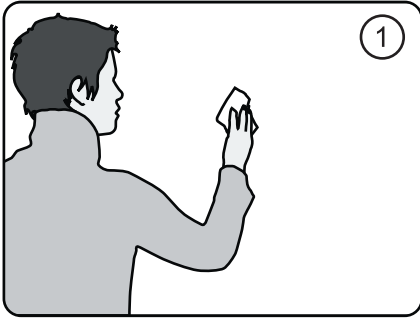


When applying to a wall, window or any other flat smooth surface please make sure it is free of dust and dirt. We recommend wiping the surface with a cloth to remove any residue that may prevent the dVider sticker from adhering to the surface.

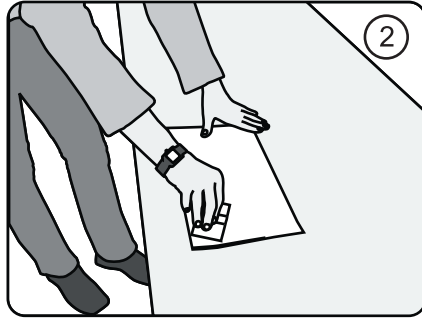

The sticker is sandwiched between the backing paper and the transfer paper. Place the sticker with the backing facing up and the transfer paper (side with the color sticker dot) facing down. Apply firm even pressure over the sticker through the backing paper using the provided squeegee. This is to make sure that the sticker transfers onto the transfer paper.

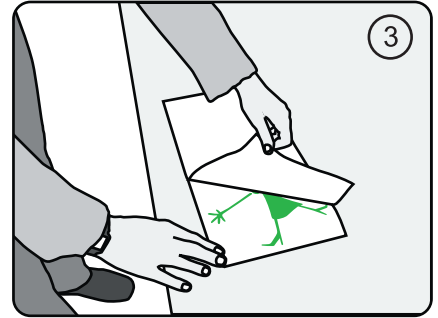

With the backing paper still facing up - hold down one corner of the transfer paper and gently peel the backing paper away from the transfer paper. Make sure that none of the sticker pieces are left on the backing paper - if this does happen, use the squeegee and gently press through the backing paper so that all of the sticker pieces transfer onto the transfer paper.

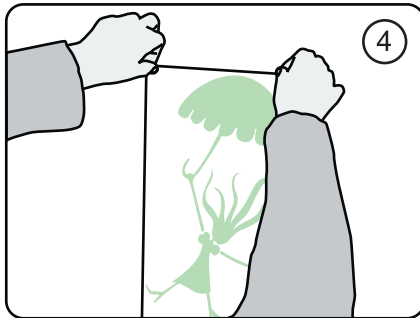


With the entire sticker left attached to the transfer paper, you are now ready to apply it. Prior to applying the sticker it is important that you decide exactly where you are placing the sticker as once it is applied it cannot be reused.


stick 'em up




Face the self-adhesive side of the sticker down in the location that you desire with the transfer paper facing up and apply even, firm pressure using the provided squeegee to ensure the complete removal of any air bubbles.

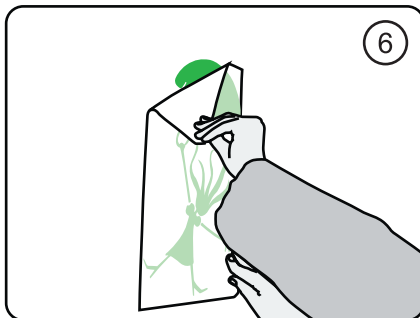

Gently peel the transfer paper away from the sticker. Make sure that no parts of the sticker are left attached to the transfer paper.

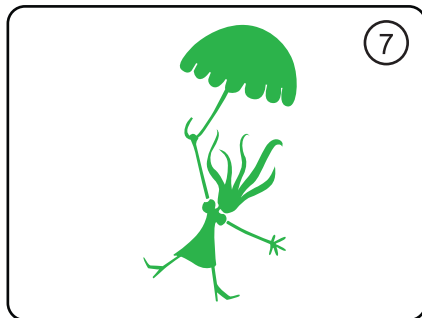

In the event that there are air bubbles remaining after the sticker has been applied, simply puncture with a small straight pin and press down with your fingers.

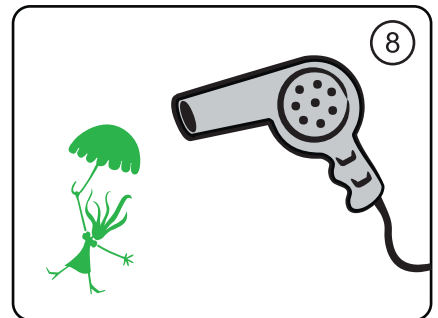

Time for a new sticker? They peel off easily, but blowing them with hot air helps save those nails.